


# Data Sheet

## Safety Contact Mat

U.S. Edition



## The main principle of an ASO Safety Contact Mat

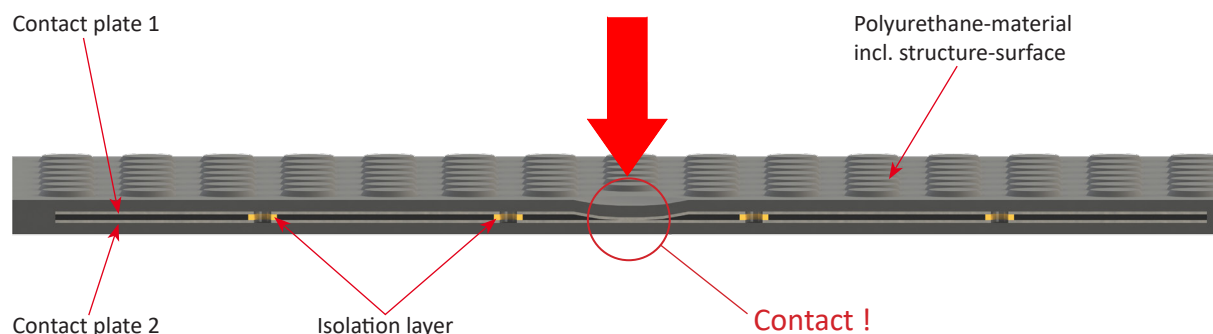


## The structure

The basic design principle of the SENTIR mat consists of two conductive plates which are separated by a rasterized insulating layer. These plates are completely molded in a polyurethane material so they are impervious to oil, water and dirt. The surface is slip resistant and provides excellent resistance against oil and grease. Cable exits can be placed customized to your needs. Usually SENTIR mats are provided with corner cable exits and M8 male & female connectors. Either molded or aluminum ramp rails can be used to avoid tripping hazards. Furthermore, in addition to ramp rails, a fixing rail can be provided if necessary.

## Signal processing

The SENTIR mat is usually fitted with twin- cables and offers the possibility of connecting several mats in series up to a maximum total area of 10 m<sup>2</sup> (15500 in<sup>2</sup>). One end of the cable is connected to a safety relay and the terminal resistance is connected to the other end (set up by manufacturer). The safety relay provides monitoring for the entire circuit, including cabling and mats, by monitoring the terminal resistance. The two plates make contact when stepped on and the resistance is bridged. This immediately causes a signal within the electronics that is then given as a potential free relay output. At the same time, the entire switching circuit is wire fault or manipulation monitored. In case of special requirements, the SENTIR mat can be produced for a 4-wire-monitoring.

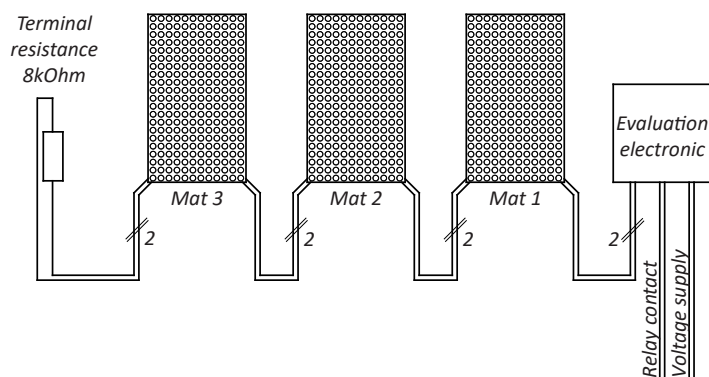

## Please pay attention to:



To avoid the risk of crushing, Safety gloves must be worn!

- Up to 10 Safety Contact Mats wired in series may be connected with one evaluation control unit. The maximum total area must not exceed 10 m<sup>2</sup> (107,64 sq.ft.)!
- The total cable length must not exceed 25m (82').
- The 8.2 K $\Omega$  terminal resistance must be connected to the last mat in series when several mats are connected!
- Please inquire separately for mats with recesses or special shapes.

To be done by a person trained or qualified in electrical and mechanical engineering.

## Ramp rail RS 14

The ramp rail RS 14 provides secure mounting capability for the safety contact mat. The angled design reduces tripping and slipping when mounted to the mat. The integrated channel can be used for clean and safe installation of the connecting cables.


## Fixation rail BS 14

The fixation rail BS 14 can be used to attach the safety contact mat in less accessible areas (for example at machines, shut-off positions, walls, etc.). Also, the integrated channel can be used for clean and safe installation of the connecting cables.


## Fastening sleeve

Enables the safety contact mat to be fixed to the floor without additional space being needed. Different than the fixation rail BS 14, a fastening sleeve is implemented into the mat design.

**SENTIR mat 14**

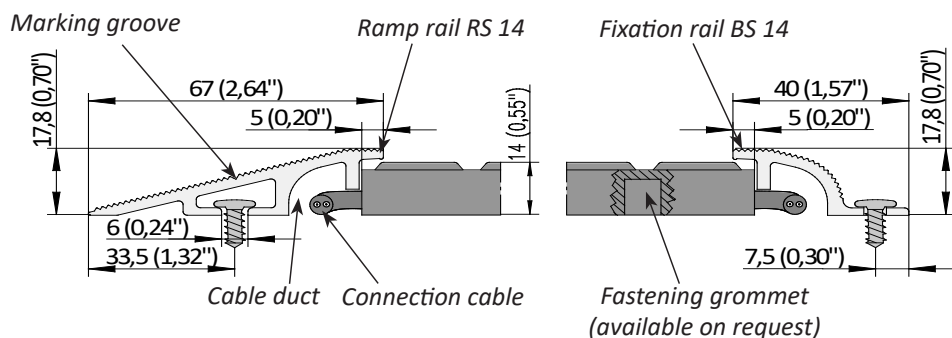

**SENTIR mat 14 ARB (SENTIR mat 14 TBV)**

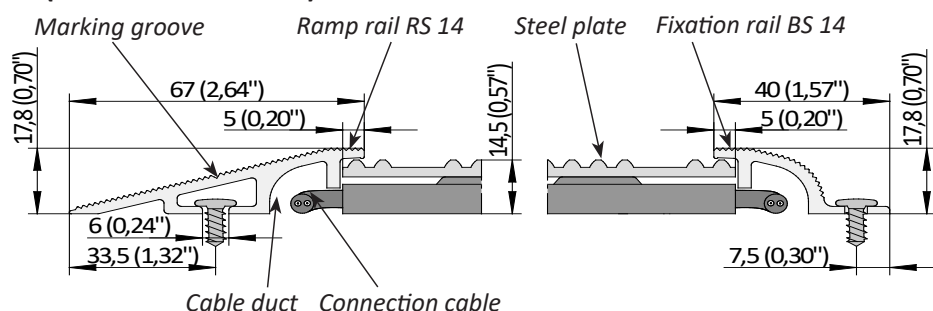


**Technical specifications for Safety contact mats**

	<b>SENTIR mat 14 U / 14 T</b>	<b>SENTIR mat 14 ARB</b>
Max. dimension	2350x1350mm (92,52"x53,15")	2350x1350mm (92,52"x53,15")
Standard dimensions available from stock	only SENTIR mat 14 U / T 1000x750mm (39,37"x29,53") 1000x1000mm (39,37"x39,37") 1000x1500mm (39,37"x59,06")	
Height	14mm (0,55") with covering	14mm (0,55") with covering
Surface	Euro dot	4checkered
Weight	U 24,9 Kg/m <sup>2</sup> (54,9lb/10,76ft <sup>2</sup> ); T 26 Kg/m <sup>2</sup> (57,32lb/10,76ft <sup>2</sup> )	approx. 31,5 kg/m <sup>2</sup> (69,45lb/10,76ft <sup>2</sup> )
Inactive edge	16 mm (0,63")	0 mm (0")
Switching pressure	Test piece Ø 80 mm (3,15") = approx. 150 N	Test piece Ø 80 mm (3,15") = approx. 150 N
Static load	max. 2000 N on Ø 80 mm (3,15") *	max. 2000 N on Ø 80 mm (3,15") *
Response time	< 25 ms *	< 25 ms *
Switching cycles	min. 1 mil. *	min. 1 mil. *
Electrical capacity	24 V 100 mA	24 V 100 mA
Material	PUR black, 68 +/- 5 Shore A	PUR black, 68 +/- 5 Shore A
Protection class	IP 65 (IP67)	IP 65 (IP67)
Temperature range	-10°(+14°F) to + 55°C (+131°F)	-20°(-4°F) to + 55°C (+131°F)
Chem. resistance:		Aluminum
Oil	good	good
Petrol	resistant	good
Solvent	sufficient	good
Diluted acid	resistant	good
Diluted lye	resistant	good
Connection cable	Standard: Pluggable, 2 x 0,34 PU-cover black with M8 male/female plug, 120mm (4,72")	
Fire and shock evaluation	UL 508 and CSA C22.2 no. 14	

\* Tested according to DIN EN ISO 13856-1

## Order key

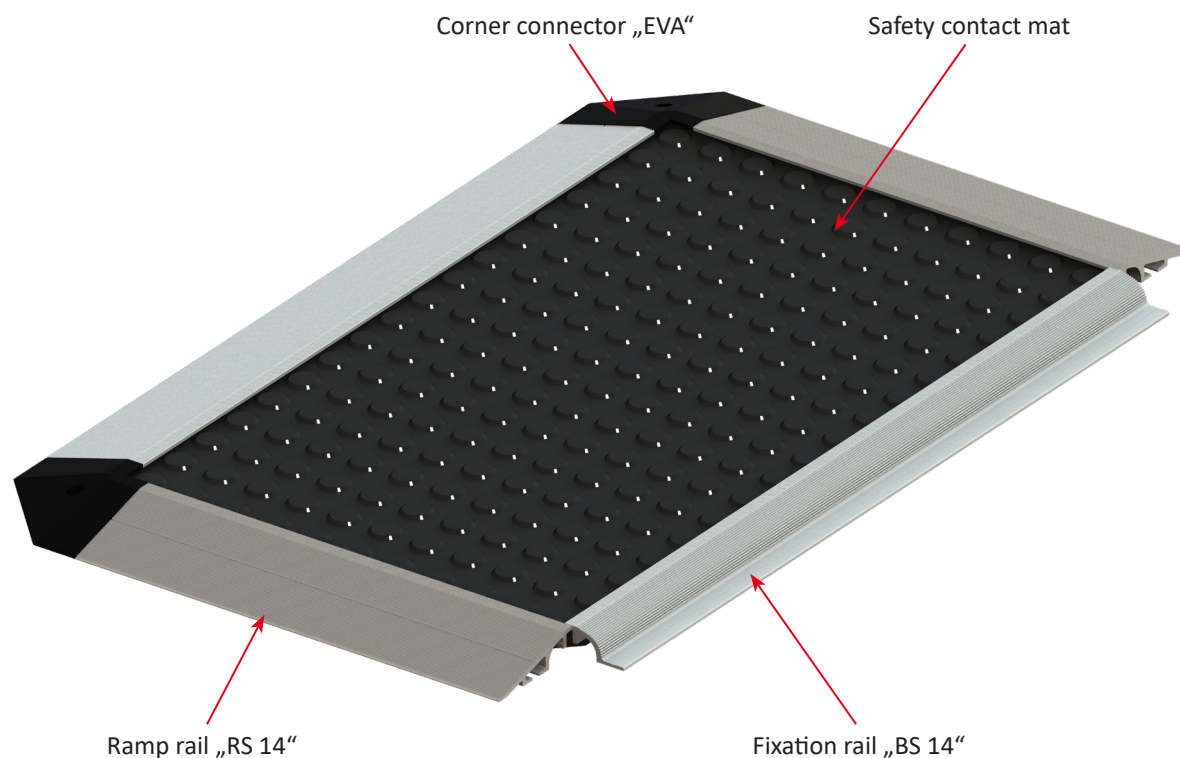

1.	2.	3.	4.	5.	6.
SENTIR mat	-	14	1	T	4.X NP

### 1. Description

ASO-Safety Contact Mat

### 2. Height

e.g. 14 mm (0,2")

### 3. Number of switch zones within one mat

### 4. Materials ground plate

U : One compound mat

T : With molded ramp rail

F : For ARB- or TBV-cover

### 5. Cable versions

0 : 1x double-lead cable connection

1 : 1x cable connection + internal end resistor

2 : 2x double-lead cable connection

3 : 1x cable connection with external resistor

4.0 : 1x M8 connector male and 1x M8 connector female

4.2 : (like 4.0) with M8 connection cable 2,5 m (8,2')

4.3 : (like 4.0) with 5 m (16,4') cable, M8 connector female and M8 resistor plug

4.4 : (like 4.0) with 5 m (16,4') cable, M8 connector male and 5 m (16,4') cable, M8 connector female

### 6. Surface

ARB : Aluminum cover


TBV : Stainless steel cover

NP : Dot surface

### Technical data of accessories


#### Ramp rail RS 14

<b>Applicable to:</b>	SENTIR mat 14 ARB / 14 TBV / 14 NP
<b>Artilel-No.:</b>	603001
<b>Material:</b>	Aluminum AlMgSi 0,5
<b>Standard delivery length:</b>	3m (9,84')
<b>Weight:</b>	Ca. 788 g (1,74 lb) / serial meter (3,28')
<b>Accessories:</b>	3 sealing plugs/serial meter

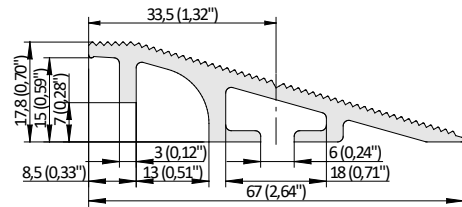


#### Fixation rail BS 14

<b>Applicable to:</b>	SENTIR mat 14 ARB / 14 TBV / 14 NP
<b>Artilel-No.:</b>	603003
<b>Material:</b>	Aluminum AlMgSi 0,5
<b>Standard delivery length:</b>	3m (9,84')
<b>Weight:</b>	Ca. 411 g (0,91 lb) / serial meter (3,28')

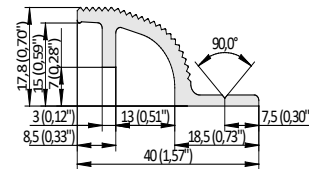


#### Corner connector EVA

<b>Applicable to:</b>	SENTIR mat 14 ARB / 14 TBV / 14 NP
<b>Artilel-No.:</b>	603020
<b>Material:</b>	PA 6 30% DV, black
<b>Weight:</b>	Ca. 29 g (0,06 lb) /pc.

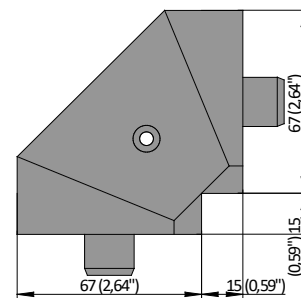

#### Aluminum surface


<b>Applicable to:</b>	SENTIR mat 14 ARB
<b>Artilel-No.:</b>	1600028
<b>Material:</b>	Aluminum 2,5 mm (0,10") max. 2500 x 1400 mm (98,43"x 55,12")
<b>Weight:</b>	Ca. 7,6 kg/m <sup>2</sup> (1,56 lb/ft <sup>2</sup> )

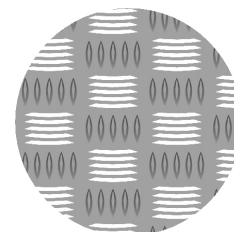

Aluminum checkered plate

#### Stainless steel surface

<b>Applicable to:</b>	SENTIR mat 14 TBV
<b>Artilel-No.:</b>	1600016
<b>Material:</b>	Stainless steel 2,5mm (0,10") max. 2500 x 1250 mm (98,43"x 49,21")
<b>Weight:</b>	Ca. 11,6 kg/m <sup>2</sup> (2,38lb/ft <sup>2</sup> )

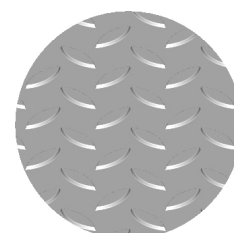

Stainless steel bulb plate

## Handling / Storage:



To avoid the risk of crushing, Safety gloves must be worn!

- Do not drag SENTIR mats by their lead wire
- Never store outdoors
- Do not place SENTIR mats leaving overlaps- place bigger SENTIR mats at the bottom
- Bending long SENTIR mats by carrying them flat subjects them to undesirable stress

## Installation / Procedures:



To avoid the risk of crushing, Safety gloves must be worn!



Read all instructions first before installing/setting up the Product!

Do not drink any alcohol or take any drugs before or during the setup of the Product and follow the safety instructions carefully.

- Important: All installations, repairs and tests should be performed by a trained, responsible individual.
- Unpack the SENTIR mats carefully keeping them flat and not to pull on the wires. Place the SENTIR mats on the floor in the planned positions with the connecting wires at the outer limits of the detection zone.
- The control unit should be installed as supplied. It must not be modified or subjected to procedures or connections other than those described with the instructions.

## ! MOUNTING INFORMATION



### Preparations/set-up:



To avoid the risk of crushing, Safety gloves must be worn!

Installation and electrical work must be performed by authorized electricians.

- Lay out and position the mat correctly. Mats may not be folded or bent. Safety-Contact-Mats may not be manipulated in any way. Cut outs or shortening is not possible.
- The floor or mounting surface for the SENTIR mats has to be flat, smooth, rigid, clean and dry and show no observable distortion under the heaviest load anticipated. Undulations, protrusions, large gaps or other irregularities will increase the sensitivity of the SENTIR mats and may result in intermittent unintended switching off.
- Wiring must be in accordance with the National Electric Code and applicable local codes and ordinances.
- Commissioning should be undertaken by a trained electrical technician experienced in safety installations.
- Ensure that the personnel understand that no additional coverings, boards, plates or planks are to be in the SENTIR mat during operation of the machine.

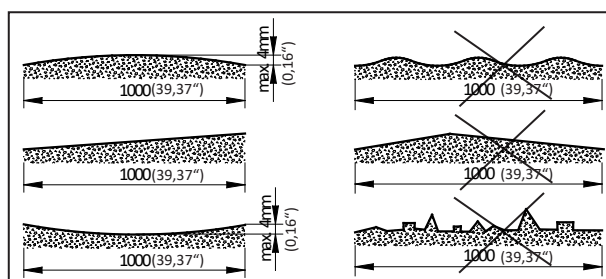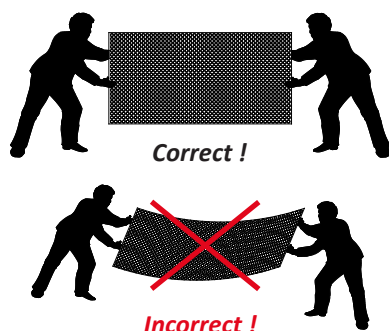

Flatness tolerance for subfloor (according to DIN 18202)




Please note for measurement:

The ramp rail and/or the fixation rail is needed to fix the mat to the floor. Subsequently, the total space required is calculated by adding up the zone to be guarded (nominal dimension of mat) and the width of the ramp rail or fixation rail.


	Ramp rail	Oversize	Fixation rail	Oversize
SENTIR mat 14	RS 14 Aluminum	62 mm (2,44")	BS 14 Aluminum	35 mm (1,38")
SENTIR mat 14 T	Molded	35 mm (1,38")	- / -	- / -
SENTIR mat 14 ARB	RS 14 Aluminum	62 mm (2,44")	BS 14 Aluminum	35 mm (1,38")
SENTIR mat 14 TBV	RS 14 Aluminum	62 mm (2,44")	BS 14 Aluminum	35 mm (1,38")

Available space for safeguarding: **1200 x 500 mm (47,24" x 19,69")**  
Required Safety contact mat: **SENTIR mat 14** with ramp rail **RS 14** and fixation rail **BS 14**  
Example of calculation:  $1200 - 62 - 62 = 1076 \text{ mm } (47,24" - 2,44" - 2,44" = 42,36")$   
 $500 - 62 - 35 = 403 \text{ mm } (19,69" - 2,44" - 1,38" = 15,87")$   
Ordering example: **SENTIR mat 14 1000 x 400 mm (19,69" - 2,44")** with **RS 14** and **BS 14** also with specification for positions of RS 14, BS 14 and cable outlet

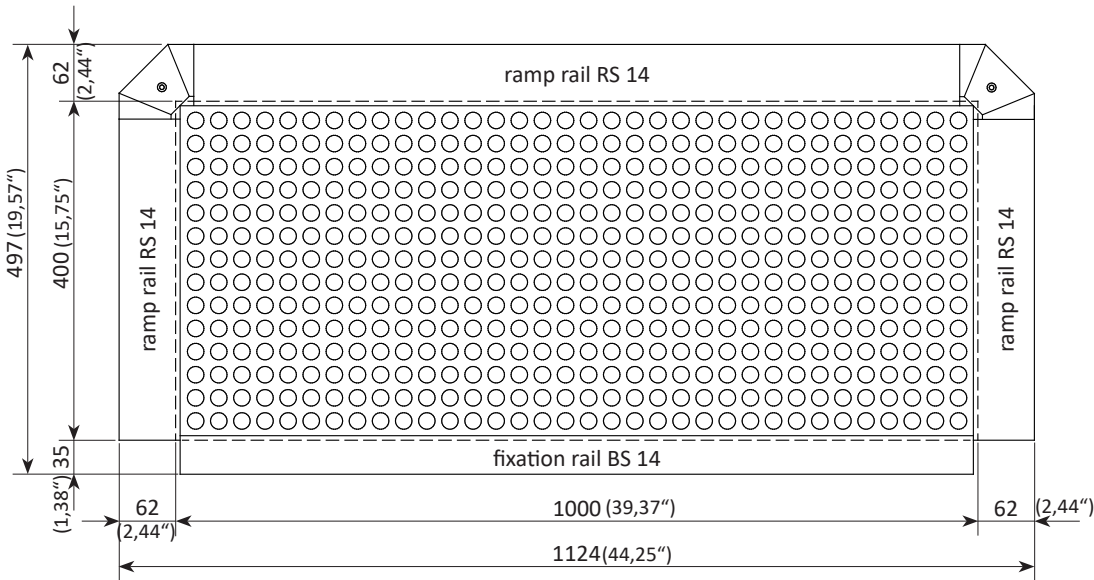

Max. producible size is 2350 mm x 1350 mm. Measures exceeding this size are feasible by combining several SENTIR mat.

If several mats are laid side by side, it has to be done very tightly to the joint. Afterwards, connect the mats electrically and check the resistance. Commissioning should be undertaken by a trained electrical technician experienced in safety installations. The resistance is supposed not to vary more than 500 Ohm from 8,2 kOhm in unactuated condition. Make sure that the cables are not damaged in a way that could possibly influence its function.

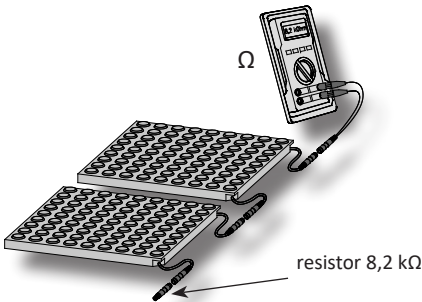

## Assembly of SENTIR mat 14



To avoid the risk of crushing, Safety gloves must be worn!


Installation and electrical work must be performed by authorized electricians.

When using corner connectors, the ramp rail has to be shortened 20mm (0,79") for each corner connector.


Insert the cable-near corner connector from above to make sure the cable is led through the cable duct (fig. 1). Then attach the ramp rail to the ground with 6mm (0,24") dowels and appropriate screws.

Adjust the ramp rail laterally to the mat and plug it on the guiding pin (fig. 2). Mark the fastening points (One each 60cm/23,62") on the center line of the ramp rail and pre-drill 10 mm (0,39") for the sealing plugs. Then again attach the ramp rail to the ground with 6 mm (0,24") dowels and appropriate screws and seal the holes with the sealing plugs (fig. 3).


For additional ramp rails follow the same instructions.

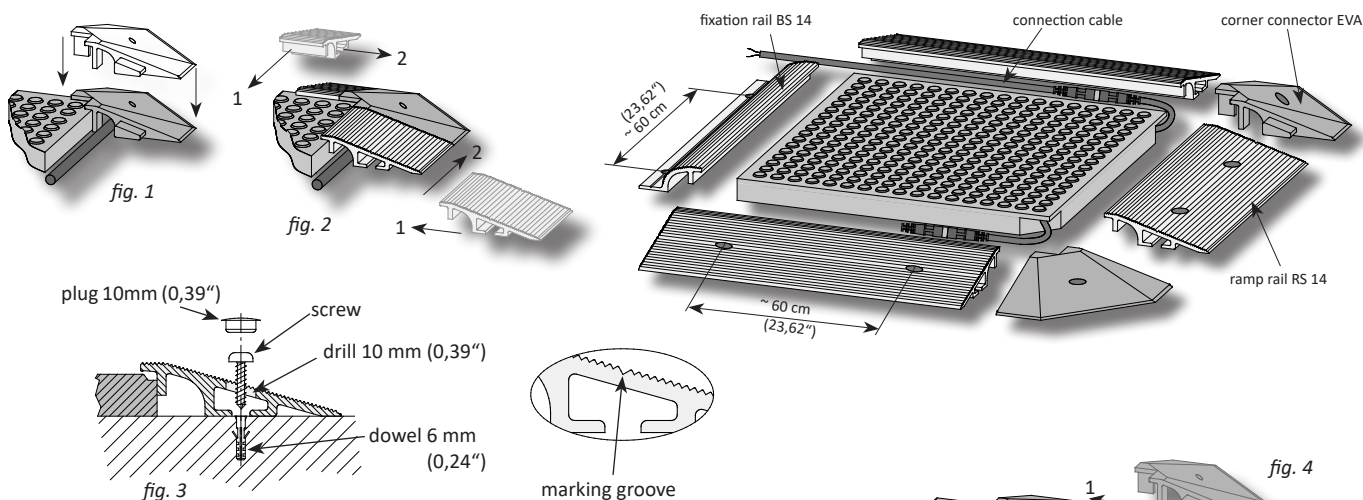


The fixation rail BS 14 is used to fix SENTIR mat on the side facing the machine. Mounting instructions of the ramp rail RS 14 apply to fixation rail BS 14 as well. If possible, cables should be led out laterally and connected to the electronic monitoring devices by a trained electrical technician experienced in safety installations (fig. 5).

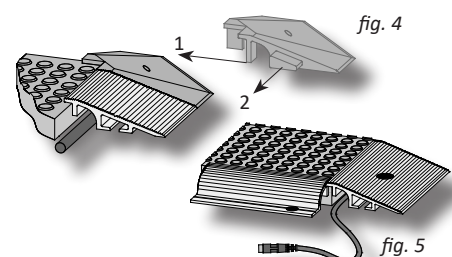

## SENTIR mat 14 ARB / SENTIR mat 14 TBV

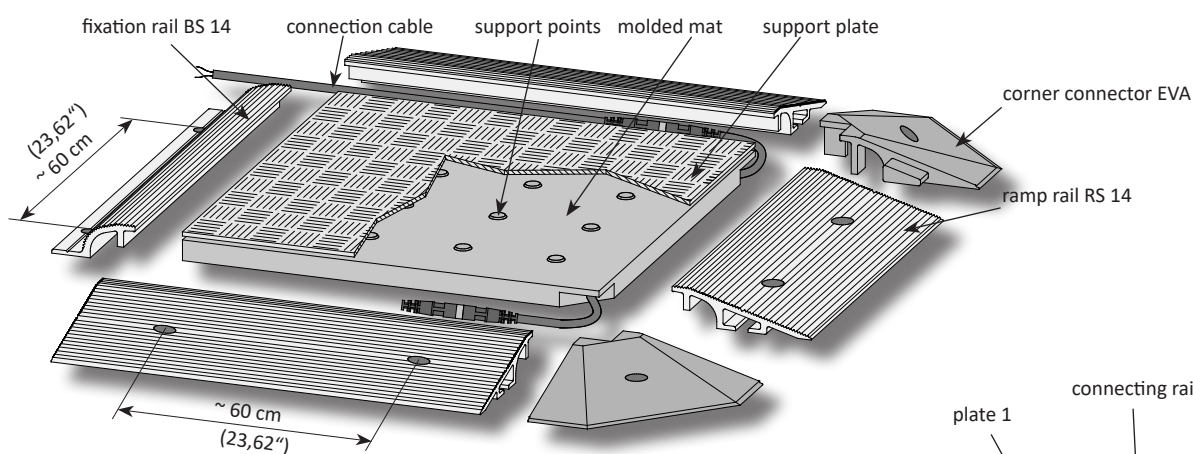

If SENTIR mat are equipped with a metal surface (ARB aluminum, TBV high grade steel), please note that the surface **MUST NOT** be glued or fixed permanently to the mat to ensure safety function. Instead, fix the metal surface with ramp rail RS 14 or fixation rail BS 14. Multi-part metal surfaces are supposed to be connected with connection bars (fig. 6).

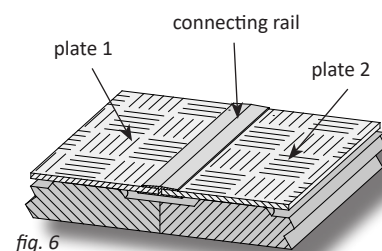





### Mounting of SENTIR mat 14 T with molded ramp rail

#### Please note for oversize:



The total space requirement of a SENTIR mat with molded ramp rail results from the space of the area to be safeguarded (nominal dimension of mat) and the width of the ramp rail. The width of the ramp rail RS 14 is 35 mm (1,38") (fig. 7).

In order to avoid any clamping or pinching of the cables, cut the cable outlet on required side (fig. 8).

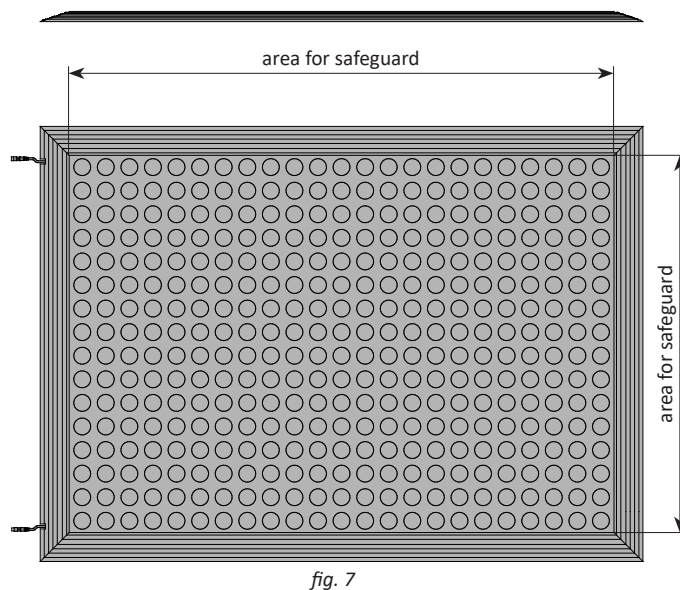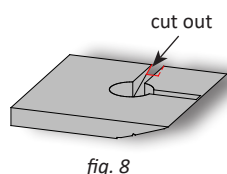

#### Installation

Adjust the SENTIR mat according to your needs and fix them to the floor with adequate dowels and screws (fig. 9).

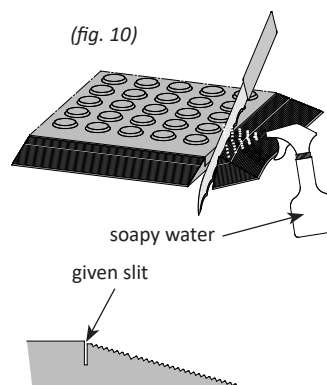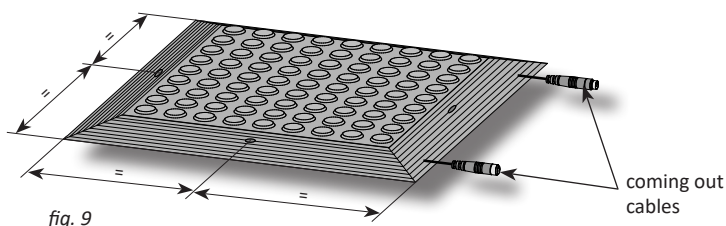


If several mats are laid side by side, it has to be done very tightly to the joint. Therefore, ramp rails have to be cut off on the sides which are supposed to be sequenced. Spray soapy water over knife and given cutting slit (fig. 10). Adjust the SENTIR mats and protect them against displacement (fig. 11).

Afterwards, the mats have to be connected electrically and the resistance has to be checked by a trained electrical technician experienced in safety installations.

The resistance is supposed not to vary more than 500 Ohm from 8,2 kOhm in unactuated condition.

Unevenness and/or small inclusions of air which can appear on the back of the mat does not affect the functionality of the SENTIR mat in any way. These kind of visual appearances are caused during the production process and do not constitute a cause for any complaint.

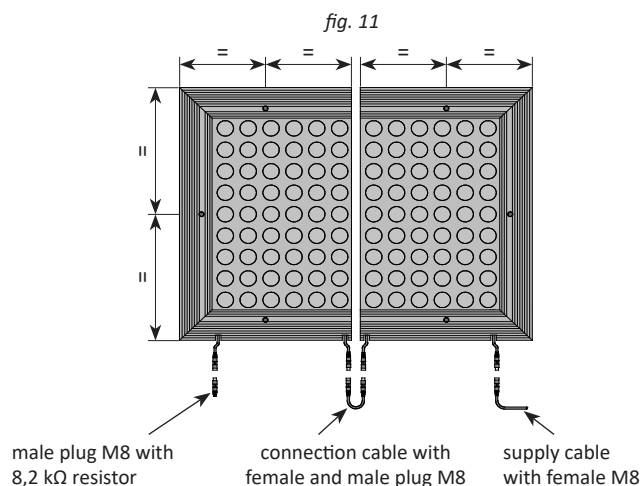

**For traffic safety the cable outputs should always be aligned to the machine side!**



Read all instructions first before installing/setting up the Product!  
Do not drink any alcohol or take any drugs before or during the setup of the Product and follow the safety instructions carefully.

## Maintenance:



To avoid the risk of crushing while maintaining, Safety gloves must be worn!



Installation and electrical work must be performed by authorized electricians.

- Weekly check whether fluids have collected around the SENTIR mats, possibly indicating fluids underneath the SENTIR mats as well.
- The SENTIR mats should be regularly swept to prevent potential hazards. If it is necessary to wash or hose down the SENTIR mats to clean or remove grease etc., warm water and detergent may be used.
- Do not use solvents to clean SENTIR mats.

### Routine Inspection and tests:

- Recommended weekly.
- Stop the machine, clean the SENTIR mats and allow them to dry off. Inspect the top surface of the SENTIR mat for damage.
- Damage which exposes the metal plate must be dealt with immediately. Check that the trims are not cracked or broken. Damaged parts must be replaced immediately. Otherwise there is a risk of function failure, as well as a risk of injury.
- Test the SENTIR mat operations.
- If the inspections tests performed reveal any problems, do not allow use of the machine until they are rectified. Record the inspection and test in a written log.

### Thorough Examination and test:

Recommended twice yearly or after damage. To be done by a person trained or qualified in electrical and mechanical engineering.

- Isolate power source to the machine. Observe electrical safety precautions.
- Disconnect the SENTIR mat from the control unit.
- Inspect the SENTIR mat components thoroughly for mechanical damage.
- Test the SENTIR mat operations.
- If the inspections tests performed reveal any problems, do not allow use of the machine until they are rectified. Record the inspection and test in a written log.

The sequence of examination operations varies at different applications. The trained staff is responsible for the correct sequence of examination operating in terms of safety.

### TAMPERING WITH COMPONENT PARTS WILL INVALIDATE WARRANTY.

In the event of problems contact the supplier.

## Precautions (General):

Warning: It is the customer's responsibility to determine whether an application is subject to safety distance requirements in order to comply with OSHA and/or other safety standards.

### Precautions- Do Not's:

- Do not put holes in active portion of SENTIR mat. Holes or cuts in the SENTIR mats will decrease the life of the SENTIR mat and could cause permanent failure
- Do not attempt to reduce your weight while on the SENTIR mat (ie: don't lean on machine or railings)
- Do not paint the SENTIR mat
- Do not pull on the lead wires

- Do not fold the SENTIR mat. Always transport and store flat
- Do not allow dirt and spills to build up- keep area clean and dry
- Do not run lead wires under the SENTIR mat

In general, the SENTIR mats have good resistance to oils, fuels, solvents, acids diluted and bases diluted.

NOTE: Combinations of chemicals can have unpredictable effects. Testing is recommended in such cases. Small pieces of the material are available if testing is required.

SENTIR mat patterns provide a non-slip surface under most conditions, but should be kept free from large deposits of grease, soaps or gels.

### **Wear and Damage:**

- The SENTIR mat's outer surface can be damaged by impacts from sharp or heavy objects. After every such event the SENTIR mat should be inspected for deformation or puncturing and replaced if necessary.



- The SENTIR mats have been designed and tested to withstand one million activations in any one spot. In use, this number of operations in a single location should not be exceeded. Occasional heavy loads are unlikely to damage the SENTIR mats but they should not be used on traffic through routes.
- SENTIR mats are not suitable for use in explosive atmospheres.

### **Disclaimer:**

In no event will the manufacturer be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

If applied incorrectly, serious injury or death can occur.

The user must observe the safety instructions in this operating instructions manual, the country-specific installation standards as well as all prevailing safety regulations and accidents prevention rules.

The information contained in this operating instructions manual is provided without liability and is subject to technical modifications.

There are no residual risks, provided that the safety instructions as well as the instructions regarding mounting, commissioning, operation and maintenance are observed.

Exclusion of Liability: The manufacturer shall accept no liability for damages and malfunctions resulting from defective mounting or failure to comply with this operating instructions manual. The manufacturer shall accept no liability for damages resulting from the use of unauthorized spare parts or accessories.

Beyond that, the current version of ASO's General Terms and Conditions shall apply.

1. No safety functions have been evaluated by UL

2. When the device is not supplied by Class 2 source, the input shall be protected by a fuse with a current rating of 100 divided by the supply voltage, not to exceed 5 Amps

## EC - Declaration of conformity

**EG - Konformitätserklärung** (gemäß Anhang II 2006/42/EG)  
**EC Declaration of conformity** (according annex II 2006/42/EC)  
**Déclaration de conformité CE** (selon annexe II 2006/42/CE)



Hiermit erklären wir, dass die  
nachfolgend bezeichneten Schaltleisten

We hereby declare that the following  
products of sensing contact edges

Par la présente nous déclarons que les  
produits suivants de la série barres  
palpeuses:

**SENTIR mat 10 / 10T**  
**SENTIR mat 14 / 14T**

**SENTIR mat 10 / 10T**  
**SENTIR mat 10 / 14T**

**SENTIR mat 10 / 10T**  
**SENTIR mat 10 / 14T**

zur Kombination mit den  
Sicherheitsschaltgeräten der Baureihe

for the combination with safety relays  
of the model range

en combinaison avec les relais de  
sécurité

**ELMON classic 31**  
**ELMON classic/rail 32**  
**ELMON rail 34**  
**ELMON rail 35**  
**ELMON rail 39**  
**ELMON classic/rail 41**

**ELMON classic 31**  
**ELMON classic/rail 32**  
**ELMON rail 34**  
**ELMON rail 35**  
**ELMON rail 39**  
**ELMON classic/rail 41**

**ELMON classic 31**  
**ELMON classic/rail 32**  
**ELMON rail 34**  
**ELMON rail 35**  
**ELMON rail 39**  
**ELMON classic/rail 41**

aufgrund ihrer Konzipierung und Bauart  
sowie in der von uns in Verkehr  
gebrachten Ausführung, den  
einschlägigen grundlegenden  
Sicherheits- und  
Gesundheitsanforderungen der  
nachfolgenden EG-Richtlinien und  
Normen entspricht:

satisfies the relevant essential health  
and safety requirements of the EC  
directives and standards listed below on  
account of its design and construction,  
as does the version brought to market  
by us:

de par sa conception et sa construction,  
ainsi que dans les modèles mis en  
circulation par nos soins, répondent aux  
exigences de base pour la sécurité et la  
santé des directives et normes CE  
suivantes :

**2006/42/EG**  
**EN ISO 13856-1:2013**  
**EN ISO 13849-1:2008**

**2006/42/EC**  
**EN ISO 13856-1:2013**  
**EN ISO 13849-1:2008**

**2006/42/CE**  
**EN ISO 13856-1:2013**  
**EN ISO 13849-1:2008**

EG-Baumusterprüfung  
Notified Body 0044  
TÜV Nord Cert GmbH  
Langemarckstraße 20  
D-45141 Essen  
Nr. 44 205 11 384662 002

EC type-examination  
Notified Body 0044  
TÜV Nord Cert GmbH  
Langemarckstraße 20  
D-45141 Essen  
No. 44 205 11 384662 002

Examen CE de type  
Notified Body 0044  
TÜV Nord Cert GmbH  
Langemarckstraße 20  
D-45141 Essen  
N° 44 44 205 11 384662 002

Diese Konformitätserklärung entbindet  
den Konstrukteur/ Hersteller der  
Maschine nicht von seiner Pflicht, die  
Konformität der gesamten Maschine, an  
der dieses Produkt angebracht wird,  
entsprechend der EG-Maschinen-  
richtlinie sicherzustellen.

This declaration of conformity does not  
relieve the designer / manufacturer of  
the machine from his obligation to  
ensure that the conformity of the entire  
machine to which this product is  
attached satisfies the corresponding EC  
directive.


Cette déclaration de conformité ne  
délie pas le constructeur / fabricant de  
la machine de son obligation d'assurer  
la conformité de l'ensemble de la  
machine à laquelle ce produit est  
apposé selon la directive CE.

**Hersteller und**  
**Dokumentationsbevollmächtigter**

**Manufacturer and attorney of**  
**documents**

**Fabricant et agent de documentation**

**ASO GmbH**  
**Hansastr. 52**  
**D-59557 Lippstadt**  
**Lippstadt, 08.05.2014**

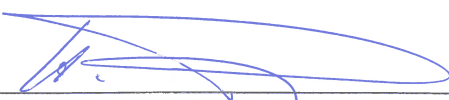  
**H. Friedrich**  
**- Geschäftsführer - CEO - Gérant -**



Notes

Notes section containing a grid of dotted lines for writing.

## Notes

A large area for taking notes, consisting of a grid of small dots for writing.



Notes

Notes section containing a grid of dotted lines for writing.

# SENTIR

Safety Contact Mat

English

16.DB.00.004 Data Sheet Rev 11

Subject to technical modifications.

No liability can be assumed for errors or misprints..



ASO Safety Solutions Inc.  
300 Roundhill Drive, Unit 6 • NJ 07866 Rockaway  
Tel.: +1 973 5869600 • Fax: +1 973 5861590  
www.asosafety.com • e-mail: sales-us@asosafety.com

